Mocom Tethys – Quick Guide #1	Page	1 of 1	
Loading and Selecting Cycles	Version	1.0	AUSTRALIA
	Amend date	17/4/15	AUSTRALIA

Loading the Tethys

- Place bare instruments into the basket in an orderly fashion.
- Small items may need to be placed into a holder to stop them falling though the basket holes.
- <u>Do not process complex hollow devices such</u> as Handpieces.
- Do not overload the basket. Do not stack or pile the instruments.
- Place the basket(s) into the basket holder rack. The holder will fit up to 2 baskets. Lower the entire rack into the washing chamber.
- Check that the rotating nozzle in the lid of the unit does not touch the load and is free to spin when closed before closing the lid completely.



 Select from the main screen either the "Last Cycle" shortcut to repeat the last run cycle again or touch the cycle selection area and then choose a different cycle from the description list below.





Disinfection: Combines washing, Ultrasonic cleaning, Thermal disinfection and drying to minimise soil, bacteria and viruses on instruments. (The safest option) Cycle time is approx. 35 minutes



Washing: Combines washing and Ultrasonic cleaning only – The load <u>will not be thermally disinfected</u> with this option. Take care handling the instruments after removal. Cycle time is approx. 23 minutes.



PreWashing: Prevents drying of organic residues on the instruments if left. Washing or disinfection must still be performed before removing the instruments. Cycle time is approx. 7 minutes.







Custom cycles: The Tethys has provision for two custom disinfection cycles and one custom washing cycle, programmed for your specific needs.

Note: The Tethys can be set to only allow the use of specific cycles for specific users.

- Press the start Button
- Delay start can be set by using the "clock" button.
- Extra drying can be added by pressing the "Dry" button (only available on the disinfection cycle)
- A successful cycle will be indicated by a green "tick" icon.
- Unlock the lid by pressing the key icon.
- Unload the Tethys by lifting the basket holder from the wash chamber.



